



| Original | | Recharge | | Original | | Recharge | |
|----------|-----------------|----------|----------------|----------|-----------------|----------|----------------------|
| | Power | | Power | | 3 / >> / > | | + / Play |
| | Source | | Source | | 4 / VGA | | Volt / Focus |
| | Zoom | | Eco / Aspect | | 5 / Stop / Back | | Vol - / Page - |
| | Hide | | Eco / Aspect | | 6 / Video | | Comp / Video |
| | Ratio | | Auto | | 7 / SD / USB A | | Shift + Comp / Video |
| | Freeze | | Shift + Mode | | 8 / HDMI / DVI | | - / Stop |
| | Up | | Freeze / Timer | | 9 / Lan Wifi | | Help / Info |
| | Down | | Up | | 0 / USB B | | Blank / Mute |
| | Right | | Down | | PgUp / | | Shift + Up |
| | Left | | Right | | PgDn / S-Video | | Shift + Down |
| | Menu | | Left | | | | |
| | Mode | | Menu | | | | |
| | 3D | | Mode | | | | |
| | Media Home | | 3D / Invert | | | | |
| | Media Setup | | 3D / Invert | | | | |
| | 1 / <<< / < | | Shift + Menu | | | | |
| | 2 / > / Enter | | Shift + Power | | | | |
| | | | Vol + / Page + | | | | |
| | | | Enter | | | | |

