















 

 



 



 

 







Original		Rechange		Original		Rechange	
	Power		Power		F1 / Find		D.Menu / Top
	Mute		Mute / Dimmer		F2 / Zoom		Zoom / Size
	Red		Red / Netflix / Search		F2 / Zoom		Setup / OPT /
	Green / Aspect		Green / APP / Repeat		F3 / TXT		Smart / List
	Green / Aspect		Picture / Format		F3 / TXT		Text / Goto
	Yellow		Yellow / YouTube / Repeat		F4		Display / Media
	Blue / SUBT		Subtitle / EQ		Menu		Menu / Home
	Blue / SUBT		Blue / Prime Video / Random		Up / CH+		Up
	<<		<< / Tune-		Info		Info / Angle
	>>		>> / Tune+		Left / Vol-		Left
	I<<		I<< / Preset-		OK		OK
	>>I		>>I / Preset+		Right / Vol+		Right
	USB		Shift + 8		FAV		Fav / Marker / PC
	Play / Pause		Play / Slow		Down / CH-		Down
	Play / Pause		Pause / Step / Freeze		Exit		Exit / Cancel / Clear
	Stop		Stop / Hold		Vol+		Vol+
	Rec		Rec / Rec Mode		EPG		Guide / EPG / -/-





Original		Rechange	
	Pag+		CH+ / Page+
	Vol-		Vol-
	Audio		Audio / Lang I/II
	Pag-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	TV / Radio		TV/Radio /

Original		Rechange	

















 





 

 

 

 







Original		Rechange		Original		Rechange	
	Power		Power		F1 / Find		D.Menu / Top
	Mute		Mute / Dimmer		F2 / Zoom		Setup / OPT /
	Red		Red / Netflix / Search		F2 / Zoom		Zoom / Size
	Green / Aspect		Picture / Format		F3 / TXT		Text / Goto
	Green / Aspect		Green / APP / Repeat		F3 / TXT		Smart / List
	Yellow		Yellow / YouTube / Repeat		F4		Display / Media
	Blue / SUBT		Subtitle / EQ		Menu		Menu / Home
	Blue / SUBT		Blue / Prime Video / Random		Up / CH+		Up
	<<		<< / Tune-		Info		Info / Angle
	>>		>> / Tune+		Left / Vol-		Left
	I<<		I<< / Preset-		OK		OK
	>>I		>>I / Preset+		Right / Vol+		Right
	USB		Shift + 8		FAV		Fav / Marker / PC
	Play / Pause		Play / Slow		Down / CH-		Down
	Play / Pause		Pause / Step / Freeze		Exit		Exit / Cancel / Clear
	Stop		Stop / Hold		Vol+		Vol+
	Rec		Rec / Rec Mode		EPG		Guide / EPG / -/-





Original	Rechange
 Pag+	 CH+ / Page+
 Vol-	 Vol-
 Audio	 Audio / Lang I/II
 Pag-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 TV / Radio	 TV/Radio /

Original	Rechange

