




 
 


 

 

 

 
 
 

 










 


 





 

 
 

 
 






	Original	Rechange	Original	Rechange
	Power			Play
	Info			Pause
	Zoom			Stop
	DVD/USB/SD/DV			I<</FAV-PR
	Title			>>I
	Menu			<</Guide
	Setup			>>/EPG
	CH+			1
	CH-			2
	Up			3
	Down			4
	Right			5
	Left			6
	Enter			7
	Return			8
	A-B/Language			9
	Rep/PR List			0



