







 









 







 





 









 









 





























 




















| Original  |            | Rechange  |                        | Original  |        | Rechange  |                       |
|---|------------|---|------------------------|---|--------|---|-----------------------|
|    | Power      |    | Power                  |    | 6      |    | 6                     |
|    | Open/Close |    | Eject / Surround       |    | 7      |    | 7                     |
|    | V.Mode     |    | Picture / Format       |    | 8      |    | 8                     |
|    | OSD        |    | Display / Media        |    | 9      |    | 9                     |
|    | P/N        |    | AV / Input / RDS       |    | 0      |    | 0                     |
|    | Program    |    | TV/Radio /             |    | 10+    |    | Guide / EPG / -/--    |
|    | Menu       |    | Menu / Home            |    | Up     |    | Up                    |
|    | Title      |    | Sound / Title          |    | Down   |    | Down                  |
|    | Subtitle   |    | Subtitle / EQ          |    | Right  |    | Right                 |
|    | Angle      |    | Info / Angle           |    | Left   |    | Left                  |
|  | Goto       |  | Red / Netflix / Search |  | Enter  |  | OK                    |
|  | Setup      |  | Setup / OPT /          |  | PBC    |  | Text / Goto           |
|  | 1          |  | 1                      |  | Return |  | Back / Return         |
|  | 2          |  | 2                      |  | Zoom   |  | Zoom / Size           |
|  | 3          |  | 3                      |  | Play   |  | Play / Slow           |
|  | 4          |  | 4                      |  | Pause  |  | Pause / Step / Freeze |
|  | 5          |  | 5                      |  | Stop   |  | Stop / Hold           |





|   | Original | Recharge  | Original | Recharge |
|---|----------|---|----------|----------|
|    | <<       |  << / Tune-                |          |          |
|    | >>       |  >> / Tune+                |          |          |
|    | I<<      |  I<< / Preset-             |          |          |
|    | >>I      |  >>I / Preset+             |          |          |
|    | Audio    |  Audio / Lang I/II         |          |          |
|    | R/L      |  D.Menu / Top              |          |          |
|    | Slow     |  Shift + Play /            |          |          |
|    | Resume   |  Rec / Rec Mode            |          |          |
|    | Reset    |  Exit / Cancel / Clear     |          |          |
|    | Step     |  Shift + Pause / Step /    |          |          |
|    | A-B      |  Yellow / YouTube / Repeat |          |          |
|  | DVD/USB  |  Smart / List            |          |          |
|  | Repeat   |  Green / APP / Repeat    |          |          |
|  | Mute     |  Mute / Dimmer           |          |          |
|  | Vol+     |  Vol+                    |          |          |
|  | Vol-     |  Vol-                    |          |          |

