



Original	Recharge
Standby	Power
Mute	Mute / Dimmer
EPG	Guide / EPG / /--
Info	Info / Angle
TTX	Text / Goto
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Menu	Menu / Home
Up / CH+	CH+ / Page+
Up / CH+	Up
Exit	Exit / Cancel / Clear
Left / Vol-	Vol-
Left / Vol-	Left
OK	OK
Right / Vol+	Vol+
Right / Vol+	Right
Favourite	Fav / Marker / PC

Original	Recharge
Down / CH-	CH- / Page-
Down / CH-	Down
TV/Radio	TV/Radio /
1	1
2	2
3	3
Recall	Back / Return
4	4
5	5
6	6
Goto	Shift + Text /
7	7
8	8
9	9
0	0
Rev	<< / Tune-
Fwd	>> / Tune+





	Original	Rechange	Original	Rechange
	Prev	  << / Preset-		
	Next	 >>  / Preset+		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		
	Repeat	 Shift + Green / APP /		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		

