



Original	Rechange
On/Off	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Tv Guide	Guide / EPG / -/--
Recall	Shift + Back / Return
Picture	Picture / Format
Sound	Sound / Title
Source	AV / Input / RDS

Original	Rechange
Vol+	Vol+
Vol-	Vol-
CH+	CH+ / Page+
CH-	CH- / Page-
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Back	Back / Return
FAV	Fav / Marker / PC
Up	Up
Down	Down
Left	Left
Right	Right
OK	OK
Info	Info / Angle
Text	Text / Goto
Subtitle	Subtitle / EQ
TV	TV/Radio /



