



 














































 















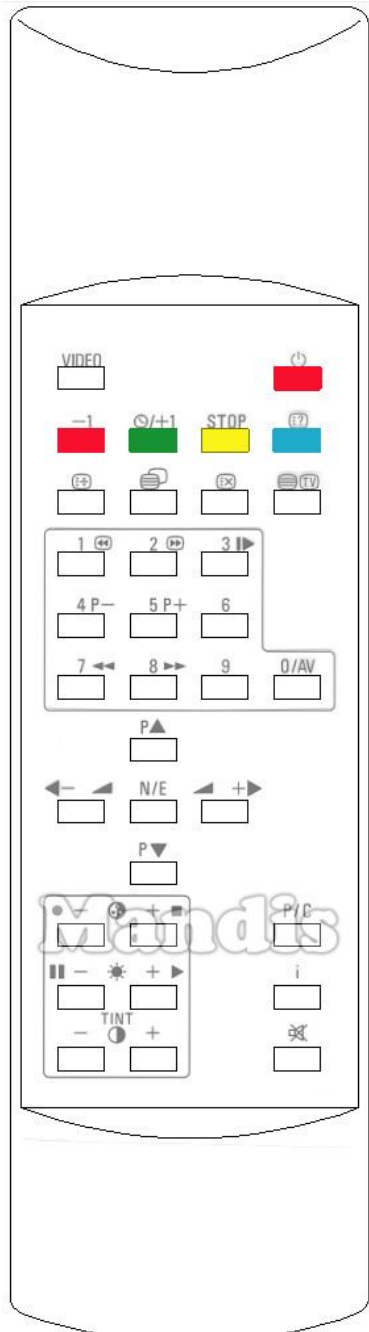



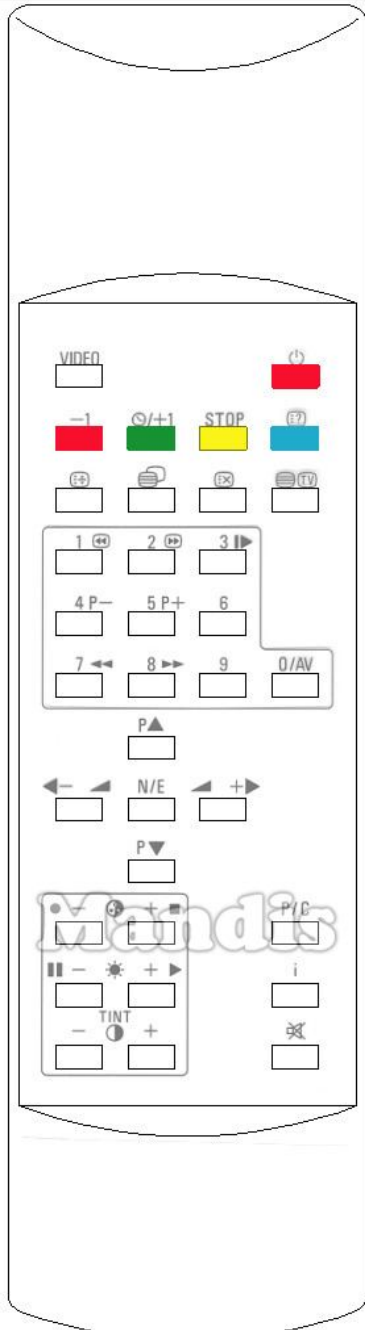
Original		Rechange		Original		Rechange	
	Power		Power		9		9
	Red		Red / Netflix / Search		0/AV		0
	Green		Green / APP / Repeat		P+		CH+ / Page+
	Yellow		Yellow / YouTube / Repeat		P-		CH- / Page-
	Blue		Blue / Prime Video / Random		Vol+		Vol+
	[=+]		Setup / OPT /		Vol-		Vol-
	[/ =]		AV / Input / RDS		N/E		OK
	[= x]		Picture / Format		Right		Right
	[=]		Text / Goto		Left		Left
	1		1		Up		Up
	2		2		Down		Down
	3		3		P/C		Back / Return
	4		4		i		Info / Angle
	5		5		Mute		Mute / Dimmer
	6		6		Color-		<< / Tune-
	7		7		Color+		>> / Tune+
	8		8		Brightness-		I<< / Preset-





Original	Recharge	Original	Recharge
 Brightness+	 >>I / Preset+		
 Tint-	 Display / Media		
 Tint+	 Smart / List		





Original	Recharge	Original	Recharge
	Power		Power
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	0/AV		0
	Vol+		Vol+
	Vol-		Vol-
	P+		CH+ / Page+
	P-		CH- / Page-
	Down		Down
	Up		Up
	N/E		OK
	Right		Right
	Left		Left
	i		Info / Angle
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Tint-		Display / Media
	Tint+		Smart / List
	<<		<< / Tune-
	>>		>> / Tune+
	I>		Zoom / Size
	I<<		I<< / Preset-
	>>I		>>I / Preset+

