





















 







 




 



 














 



 













Original		Recharge		Original		Recharge	
	Power		Power		Vol+		Vol+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		CH+		CH+ / Page+
	2		2		CH-		CH- / Page-
	3		3		Menu		Menu / Home
	4		4		Exit		Exit / Cancel / Clear
	5		5		Back		Back / Return
	6		6		FAV		Fav / Marker / PC
	7		7		Up		Up
	8		8		Down		Down
	9		9		Left		Left
	0		0		Right		Right
	Tv Guide		Guide / EPG / -/-		OK		OK
	Recall		Shift + Back / Return		Info		Info / Angle
	Picture		Picture / Format		Text		Text / Goto
	Sound		Sound / Title		Subtitle		Subtitle / EQ
	Source		AV / Input / RDS		TV		TV/Radio /



