



| Original | Recharge |
|----------|-------------------|
| Power | Power |
| Mute | Mute / Dimmer |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| FAV | Fav / Marker / PC |
| 0 | 0 |
| Recall | Back / Return |
| P.Mode | Picture / Format |
| S.Mode | Sound / Title |
| Audio | Audio / Lang I/II |

| Original | Recharge |
|----------|--------------------------|
| Menu | Menu / Home |
| Info | Info / Angle |
| Up | Up |
| Left | Left |
| OK | OK |
| Right | Right |
| Source | AV / Input / RDS |
| Down | Down |
| Exit | Exit / Cancel / Clear |
| Vol+ | Vol+ |
| Home | Shift + Menu / |
| CH+ | CH+ / Page+ |
| Vol- | Vol- |
| Mouse | Smart / List |
| CH- | CH- / Page- |
| EPG | Guide / EPG / -/- |
| Aspect | Shift + Picture / Format |





| Original | Recharge |
|-------------|------------------------|
| Sleep | Sleep / Timer |
| Rec | Rec / Rec Mode |
| Tv/Radio | TV/Radio / |
| Freeze | Shift + Pause / Step / |
| Sub-T | Subtitle / EQ |
| Rec.List | Shift + Rec / Rec Mode |
| Angle | Shift + Info / Angle |
| TTX | Text / Goto |
| Hold | Shift + Stop / |
| Reveal | Shift + Back / Return |
| Sub-P | Setup / OPT / |
| Eject/Index | Eject / Surround |
| Zoom | Zoom / Size |
| Play | Play / Slow |
| Pause/TSR | Pause / Step / Freeze |
| Stop/Auto | Stop / Hold |
| <<< | <<< / Tune- |

| Original | Recharge |
|----------------|-----------------------------|
| >>> | >>> / Tune+ |
| <<< | <<< / Preset- |
| >>> | >>> / Preset+ |
| Red/D.Setup | Red / Netflix / Search |
| Green/D.Menu | Green / APP / Repeat |
| Yellow/D.Title | Yellow / YouTube / Repeat |
| Blue/Repeat | Blue / Prime Video / Random |

