





 









 

 











 

 













 







 



 

 











| Original | | Rechange | | Original | | Rechange | |
|----------|--------|----------|-------------------|----------|----------|----------|------------------------|
| | Power | | Power | | Left | | Left |
| | Mute | | Mute / Dimmer | | Enter | | OK |
| | 1 | | 1 | | Right | | Right |
| | 2 | | 2 | | Menu | | Menu / Home |
| | 3 | | 3 | | Down | | Down |
| | 4 | | 4 | | Exit | | Exit / Cancel / Clear |
| | 5 | | 5 | | Vol + | | Vol+ |
| | 6 | | 6 | | List | | Smart / List |
| | 7 | | 7 | | CH + | | CH+ / Page+ |
| | 8 | | 8 | | Vol - | | Vol- |
| | 9 | | 9 | | CH - | | CH- / Page- |
| | Source | | AV / Input / RDS | | Fav | | Fav / Marker / PC |
| | 0 | | 0 | | Sleep | | Sleep / Timer |
| | Info | | Info / Angle | | Index | | Display / Media |
| | DMP | | D.Menu / Top | | Recall | | Back / Return |
| | Up | | Up | | Red / << | | Red / Netflix / Search |
| | EPG | | Guide / EPG / -/- | | Red / << | | << / Tune- |





| Original | | Rechange | | Original | | Rechange | |
|---|-------------|---|--------------------|---|-------|---|------------------------|
|  | Power |  | Power |  | Left |  | Left |
|  | Mute |  | Mute / Dimmer |  | Enter |  | OK |
|  | 1 |  | 1 |  | Right |  | Right |
|  | 2 |  | 2 |  | Menu |  | Menu / Home |
|  | 3 |  | 3 |  | Down |  | Down |
|  | 4 |  | 4 |  | Exit |  | Exit / Cancel / Clear |
|  | 5 |  | 5 |  | Vol+ |  | Vol+ |
|  | 6 |  | 6 |  | List |  | Smart / List |
|  | 7 |  | 7 |  | CH+ |  | CH+ / Page+ |
|  | 8 |  | 8 |  | Vol- |  | Vol- |
|  | 9 |  | 9 |  | CH- |  | CH- / Page- |
|  | [≡?]/Source |  | AV / Input / RDS |  | ♥ |  | Fav / Marker / PC |
|  | 0 |  | 0 |  | Sleep |  | Sleep / Timer |
|  | [≡i]/Info |  | Info / Angle |  | Index |  | Display / Media |
|  | DMP |  | D.Menu / Top |  | Back |  | Back / Return |
|  | Up |  | Up |  | Red |  | Red / Netflix / Search |
|  | EPG |  | Guide / EPG / -/-- |  | << |  | << / Tune- |



