
 




Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol +
	Mute		Mute		Vol-		Vol -
	1		1		CH+		Ch +
	2		2		CH-		Ch -
	3		3		EPG		Guide
	4		4		Rec		Rec
	5		5		OK		Ok
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		Red/View		Red
	Info		Info		Green/HDMI		Green
	Return		Back		Yellow/Tv Type		Yellow
	Exit		Exit		Blue/Media		Blue
	Menu		Menu		Play		Play
	Tv/Radio		TV/R		Pause		Pause





Original		Recharge		Original		Recharge	
	Stop		Stop		Pag-		Shift + Down
	Repeat		Shift + Text		FAV		Shift + Pre Ch
	>>		>>				
	<<		<<				
	>>		>>				
	<<		<<				
	Subtitle		Subt				
	Prog		Sleep				
	Goto		Pre Ch				
	Tv/TXT		Text				
	Size		Format				
	Hold		Eject				
	Index		List				
	Mix		Shift + Guide				
	Reveal		Options				
	Audio		Dual				
	Pag+		Shift + Up				

