
 

 

 












 





Original	Rechange
 Power	 Power
 Mute	 Mute
 Screen	 +  Shift + Format
 Screen	 Smart
 Tv / AV	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-	 +  Shift + Guide
 Return	 Back

Original	Rechange
 Open / Close	 Eject
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Rec	 Rec
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 OK	 Ok
 Tv-Menu	 Menu
 Exit	 Exit
 Info	 Info





Original	Rechange
Subtitle	Subt
Picture / Lan	Options
Sound / Zoom	Dual
Zoom	Shift + Eject
Nicam/A2 / Sub	Media
Sleep / Goto	Sleep
EPG / Set	Guide
Menu / FAV	Pre Ch
Menu / Fav	D. Menu
ANG / Channel	List
Title / Tv/Radio	TV/R
<<<	<<<
Text	Text
>>> / Hold	>>>
I<<<	I<<<
Size	Format
>>>I / Index	>>>I

Original	Rechange
Red / Pro	Red
Green / Slow / Device	Green
Yellow / Rep / Timer	Yellow
Timer	Shift + AV
Blue / A-B	Blue

