



 
 
 


 

 
 

 



 











 



 

 

 

 

 

 

 









Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 DTV	 Smart / List
 Radio	 TV/Radio /
 USB	 Shift + 8
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide / EPG / -/-

Original	Rechange
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 FAV	 Fav / Marker / PC
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Source	 AV / Input / RDS
 Info	 Info / Angle
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK





Original	Recharge
ASPECT Aspect	SHIFT + FORMAT PICTURE Shift + Picture / Format
SLEEP Sleep	TIMER SLEEP Sleep / Timer
AUDIO Audio	LANG I/II AUDIO Audio / Lang I/II
SUBTITLE Subtitle	EQ SUBTITLE Subtitle / EQ
TEXT Text	GOTO TEXT Text / Goto
TEXT HOLD Text Hold	OPT-TOOLS SETUP Setup / OPT /
TEXT/DVD ZOOM Zoom/Text/DVD	SIZE ZOOM Zoom / Size
DISPLAY Power/Display	MEDIA DISPLAY Display / Media
DVD MENU Rec	REC MODE Rec / Rec Mode
DVD MENU DVD Menu	TOP MENU D.MENU D.Menu / Top
I<<	PRESET- I<< / Preset-
>>I	PRESET+ >>I / Preset+
Stop/Eject	HOLD Stop / Hold
DVD SETUP Rec List/DVD	SHIFT + REC MODE Shift + Rec / Rec Mode
<< PVR/DVD	TUNE- << / Tune-
>> PVR/DVD	TUNE+ >> / Tune+
Play	SLOW Play / Slow

Original	Recharge
MI Pause	STEP - FREEZE Pause / Step / Freeze
GOTO Red/Goto	NETFLIX SEARCH Red / Netflix / Search
A-B Green/A-B	APP REPEAT Green / APP / Repeat
ANGLE Yellow/Angle/3D	YouTube REPEAT A-B Yellow / YouTube / Repeat
REPEAT Blue/Repeat	Prime Video RANDOM Blue / Prime Video / Random

