


















 




 

 
 





Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Txt	 Text
 0	 0
 [\leftrightarrow]/4:3/16:9	 Format
 TV	 TV/R
 Radio	 Shift + TV/R
 Help	 D. Menu
 Up	 Up

Original	Rechange
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Music	 Dual
 WWW	 Media
 Video	 Smart
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Vol+	 Vol +
 Vol-	 Vol -
 M	 Menu
 Back	 Back
 Prog+	 Ch +
 Prog-	 Ch -





	Original	Recharge	Original	Recharge
	Mute	Mute		
	Play	Play		
	Pause	Pause		
	Stop	Stop		
	Buy	3D		
	I<<	I<<		
	<<	<<		
	>>	>>		
	>>I	>>I		

