

 



 

 



 

 

 

 

 

 

 





 

 

 

 

 

 



 





 





















| Original | | Rechange | | Original | | Rechange | |
|---|----------|---|--------------------|---|---------------|---|-----------------------|
|  | Power |  | Power |  | CHN List |  | Smart / List |
|  | Mute |  | Mute / Dimmer |  | 0 |  | 0 |
|  | Picture |  | Picture / Format |  | Return / Back |  | Back / Return |
|  | Sound |  | Sound / Title |  | Menu |  | Menu / Home |
|  | Zoom |  | Zoom / Size |  | Up |  | Up |
|  | Subtitle |  | Subtitle / EQ |  | Source |  | AV / Input / RDS |
|  | EPG |  | Guide / EPG / -/-- |  | Left |  | Left |
|  | FAV |  | Fav / Marker / PC |  | Enter |  | OK |
|  | 1 |  | 1 |  | Right |  | Right |
|  | 2 |  | 2 |  | Down |  | Down |
|  | 3 |  | 3 |  | Exit |  | Exit / Cancel / Clear |
|  | 4 |  | 4 |  | TV / Radio |  | TV/Radio / |
|  | 5 |  | 5 |  | Vol + |  | Vol+ |
|  | 6 |  | 6 |  | Home |  | D.Menu / Top |
|  | 7 |  | 7 |  | PR + |  | CH+ / Page+ |
|  | 8 |  | 8 |  | Vol - |  | Vol- |
|  | 9 |  | 9 |  | PR - |  | CH- / Page- |





| Original | Rechange |
|--------------------|-----------------------------|
| Rec | Rec / Rec Mode |
| Sleep | Sleep / Timer |
| Info | Info / Angle |
| Play/Pause / Index | Play / Slow |
| Play/Pause / Index | Pause / Step / Freeze |
| << / Reveal | << / Tune- |
| >> / Mix | >> / Tune+ |
| Stop / Cancel | Stop / Hold |
| I<< / Size | I<< / Preset- |
| >>I / Sub-Page | >>I / Preset+ |
| Red | Red / Netflix / Search |
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |
| I/II / Nicam | Audio / Lang I/II |
| Text | Text / Goto |
| Freeze / Hold | Shift + Stop / Hold |

Hold

| Original | Rechange |
|----------|------------------|
| PVR List | Display / Media |
| Quick | Setup / OPT / |
| AD | Eject / Surround |
| 3D | Shift + 3 |

