



















 




 





Original		Recharge		Original		Recharge	
	Start/Stop		Power				
	Zoom W		CH+ / Page+				
	Zoom T		CH- / Page-				
	Left		Left				
	Up		Up				
	Right		Right				
	Down		Down				
	Play		Play / Slow				
	Stop		Stop / Hold				
	Execute		OK				
	<</Rew		<< / Tune-				
	>>/FF		>> / Tune+				
	Counter Reset		Exit / Cancel / Clear				
	Pause		Pause / Step / Freeze				
	On Screen		Display / Media				
	Tape Return		Back / Return				

