



Original	Rechange	Original	Rechange
 Power	 Power	 Recall	 Back
 Mute	 Mute	 <<	 <<
 ?/Help	 Smart	 Stop	 Stop
 []/Tv Format	 Format	 Play/Pause	 Play
 [^]/Tv/Radio	 TV/R	 >>	 >>
 */Mode	 D. Menu	 Rec	 Rec
 1	 1	 Exit	 Exit
 2	 2	 i/Info	 Info
 3	 3	 EPG	 Guide
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 OK/Enter	 Ok
 9	 9	 >>I/Next	 >>I
 0	 0	 I<</Prev	 I<<
 Menu	 Menu	 I>/Slow	 Pause

Original	Rechange	Original	Rechange
 Power	 Power	 Recall	 Back
 Mute	 Mute	 <<	 <<
 ?/Help	 Smart	 Stop	 Stop
 []/Tv Format	 Format	 Play/Pause	 Play
 [^]/Tv/Radio	 TV/R	 >>	 >>
 */Mode	 D. Menu	 Rec	 Rec
 1	 1	 Exit	 Exit
 2	 2	 i/Info	 Info
 3	 3	 EPG	 Guide
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 OK/Enter	 Ok
 9	 9	 >>I/Next	 >>I
 0	 0	 I<</Prev	 I<<
 Menu	 Menu	 I>/Slow	 Pause





Original		Rechange		Original		Rechange	
	■/File List		List				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Audio		Dual				
	Subtitle		Subt				
	Sleep		Sleep				
	Text		Text				
	FAV		Pre Ch				
	Status		AV				
	Find		3D				
	Option		Options				

