
 


 




 
 





 

 





Original	Recharge
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	P<P
0	0
--	--
	Menu [M]
	Info [i]
	I-II

Original	Recharge
	Mute
	Left
	Up
	Right
	OK
	Down
	V -
	V +
	P -
	P +
	Red / Sound
	Green / Picture
	Yellow / Feature
	Blue / Install
	Text





Original	Recharge		
		Sleep / Timer	
		Stop / Hold	
		Exit / Cancel / Clear	
		Smart / List	
		Zoom / Size	
		I<< / Preset-	
		>>I / Preset+	
		TV/Radio /	
		AV / Input / RDS	

Original	Recharge

