



Original	Recharge
Power	Power
Mute	Mute / Dimmer
Red/EPG	Red / Netflix / Search
Red/EPG	Guide / EPG / -/--
Tv/Radio	TV/Radio /
Pause	Pause / Step / Freeze
Green/Audio	Green / APP / Repeat
Green/Audio	Audio / Lang I/II
Info	Info / Angle
Recall	Back / Return
Yellow/Pg	Yellow / YouTube / Repeat
Yellow/Pg	Sleep / Timer
Yellow/Pg	Shift + CH+ /
TXT	Text / Goto
Blue/PgDw/Forma	Blue / Prime Video / Random
Blue/PgDw/Forma	Shift + CH- /
Blue/PgDw/Forma	Picture / Format

Original	Recharge
Up/CH+	Up
Left	Left
Vol-	Vol-
OK	OK
Right	Right
Vol+	Vol+
Down/CH-	Down
Menu	Menu / Home
Exit	Exit / Cancel / Clear
A-Z	Setup / OPT /
SAT	Shift + 0
FAV	Fav / Marker / PC
1	1
2	2
3	3
4	4
5	5





Original		Recharge		Original		Recharge	
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
FAV+	FAV+	+ CH PAGE	CH+ / Page+				
0	0	HDMI - BAT 0	0				
FAV-	FAV-	- CH PAGE	CH- / Page-				

