 

 


 


 

 



 



 

 

 












 
 

 

 









Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG	 Guide / EPG / -/--
 0	 0
 Rec	 Rec / Rec Mode
 Vol+	 Vol+
 Info	 Info / Angle
 CH+	 CH+ / Page+

Original	Recharge
 Vol-	 Vol-
 Home	 Menu / Home
 CH-	 CH- / Page-
 ≡	 D.Menu / Top
 Input	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Smart Colors	 Display / Media
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 Google Play	 Shift + Green / APP / Repeat





Original	Recharge	Original	Recharge
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	>>		>> / Tune+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Subt		Subtitle / EQ
	Audio		Audio / Lang I/II
	TXT		Text / Goto

Original	Recharge

