







 












 



 











 

 



 



 
 

 
 




 




Original		Recharge		Original		Recharge	
	Power		Power		Up / CH +		Ch +
	Mute		Mute		Down / CH -		Down
	1		1		Down / CH -		Ch -
	2		2		Right / Vol +		Right
	3		3		Right / Vol +		Vol +
	4		4		Left / Vol -		Left
	5		5		Left / Vol -		Vol -
	6		6		OK		Ok
	7		7		SUB-T		Subt
	8		8		Info		Info
	9		9		Text / USB		Text
	0		0		Audio		Dual
	Menu		Menu		EPG		Guide
	Last		Back		Favor		Pre Ch
	TV / R		TV/R		Red / I<<<		Red
	Exit		Exit		Red / I<<<		I<<<
	Up / CH +		Up		Green / I<<<		Green





Original	Rechange	Original	Rechange
Green / ◀◀	◀◀		<<
▶▶	c		Yellow
▶▶	▶▶		>>
▶▶▶	D		Blue
▶▶▶	▶▶▶		>>
PVR	HOME SMART		Smart
•	REC MODE		Rec
■	■		Stop
▶ /	PLAY MODE		Play
▶ /			Pause

Original	Rechange	Original	Rechange

