























 



 

 



 

 



 



 



 



 

 



 



 









Original		Recharge		Original		Recharge	
	Power		Power		9		9
	PRO/TV/TXT		TV/Radio /		FAV		Fav / Marker / PC
	Slow/Cancel		Shift + Play /		0		0
	Rep/Reveal		Shift + Back / Return		Recall		Back / Return
	TV/AV		AV / Input / RDS		Vol+		Vol+
	<</Hold		<< / Tune-		CH+		CH+ / Page+
	>>/Size		>> / Tune+		Up		Up
	l<</Subpage		l<< / Preset-		Left		Left
	>>l/Index		>>l / Preset+		OK		OK
	1		1		Right		Right
	2		2		Vol-		Vol-
	3		3		Down		Down
	4		4		CH-		CH- / Page-
	5		5		Menu		Menu / Home
	6		6		Exit		Exit / Cancel / Clear
	7		7		Nicam/A2		Text / Goto
	8		8		Display		Display / Media





	Original	Rechange	Original	Rechange
	Mute	Mute / Dimmer		
	Picture	Picture / Format		
	Sound	Sound / Title		
	Sleep	Sleep / Timer		
	Subtitle	Subtitle / EQ		
	LAN/EPG	Audio / Lang I/II		
	Pause	Pause / Step / Freeze		
	Play	Play / Slow		
	Set/CH/List	Setup / OPT /		
	D-Menu/List	D.Menu / Top		
	Stop	Stop / Hold		
	Record	Rec / Rec Mode		
	Open/Close	Eject / Surround		
	Red/Zoom	Red / Netflix / Search		
	Green/Goto	Green / APP / Repeat		
	Yellow/Title	Yellow / YouTube / Repeat		
	Blue/Angle/Screen	Blue / Prime Video / Random		

