
 
 
 





 
 
 

 





Original	Recharge	Original	Recharge
 Power	 Power	 Vol +	 Vol +
 Input	 AV	 Vol -	 Vol -
 TV / TXT	 Text	 Menu	 Menu
 Cancel	 Shift + Exit	 Mute	 Mute
 Reveal	 Smart	 Up	 Up
 Nicam / A2	 Options	 Left	 Left
 Hold	 Stop	 OK	 Ok
 Size	 Format	 Right	 Right
 Subpage	 Shift + Subt	 Down	 Down
 Index	 Shift + Info	 DVB	 Media
 Red / TV/Radio	 Red	 Exit	 Exit
 Red / TV/Radio	 TV/R	 1	 1
 Green	 Green	 2	 2
 Yellow	 Yellow	 3	 3
 Blue	 Blue	 4	 4
 CH +	 Ch +	 5	 5
 CH -	 Ch -	 6	 6





Original		Rechange		Original		Rechange	
	7		7		FAV +		>>
	8		8				
	9		9				
	0		0				
	-/--	+	Shift + Guide				
	Recall		Back				
	Picture	+	Shift + Format				
	Sound	+	Shift + Dual				
	Sleep		Sleep				
	Subtitle		Subt				
	Language		Dual				
	Display / Info		Info				
	Zoom		Eject				
	Text	+	Shift + Text				
	FAV		Pre Ch				
	EPG		Guide				
	FAV -		I<<				

