 


 
 
 

 
 


 
 

 
 



 
 






 




 
 

 
 


 

 





 



 
 

 


 



 








 

 

 





 

 

 

 


 
 
 
 

 





Original	Rechange	Original	Rechange
 Power	 Power	 Repeat	 Shift + Text
 VCR	 Smart	 A-B	 Shift + Red
 DVD	 Media	 Subtitle	 Subt
 Open / Close	 Eject	 Audio	 Dual
 Title / PBC	 Text	 I<< Prev	 I<<
 Menu	 Menu	 Play / Pause	 Play
 Display	 Info	 Play / Pause	 Pause
 Input	 AV	 Next >>I	 >>I
 Up / PR +	 Up	 <<	 <<
 Up / PR +	 Ch +	 >>	 >>
 Down / PR -	 Down	 Stop	 Stop
 Right	 Right	 Program	 Sleep
 Left	 Left	 CLK / CNT	 List
 Enter / OK	 Ok	 Search	 Shift + TV/R
 Down / PR -	 Ch -	 Zoom	 Shift + Eject
 Setup	 D. Menu	 Rec	 Rec
 Clear / 3D	 Red	 TV / VCR	 TV/R





	Original	Rechange	Original	Rechange
	Angle / Speed		Format	
	1 / Tracking -		1	
	1 / Tracking -		Vol -	
	2		2	
	3 / Tracking +		3	
	3 / Tracking +		Vol +	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	System		Options	

