



 

 




 

 







 




 


 
 

 
 

 
 



 








 
 

 









 




 
 
 



 







	Original	Rechange	Original	Rechange
	Power			Ch +
	Dimmer			Ch -
	Clock			Mute
	Sleep			Vol +
	CD			Vol -
	TUNER			SDB Tone
	iPod/USB			Folder/All
	Optical In 2			Info
	Optical In 1			Up
	Analog In			Down
	I<<			Right
	Play			Left
	Pause			Enter
	>>I			DAB/RDS
	<</Tune-			1
	Stop			Setup
	>>/Tune+			1
				2





	Original	Rechange	Original	Rechange
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	+ 10			
	Clear			
	Random			
	Repeat			
	Program			
	Mode	