



Original	Rechange
Power	Power
Open/Close	Eject
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
+10	Guide
Search	TV/R
Prog/Direct	Sleep
Clear	Exit
Call	Pre Ch

Original	Rechange
Dimmer	Shift + Info
YouTube	Media
Netflix	Shift + Smart
Vidu	Shift + Media
Info	Info
Home	Smart
Power AMP	Shift + Power
Source Up	Ch +
Source Down	Ch -
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Top Menu	Menu
Pop Up Menu	D. Menu
Return	Back
Setup	Shift + Options
Up	Up





Original	Rechange
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 <<	 <<
 Play	 Play
 >>	 >>
 I<<	 I<<
 Pause	 Pause
 Stop	 Stop
 >>I	 >>I
 Repeat	 Text
 A-B	 Shift + Back
 Random	 AV
 Pure	 Format
 Subtitle	 Subt
 Angle	 List

Original	Rechange
 Audio	 Dual
 Option	 Options
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Video Resolution	 3D
 DVD a Page	 Shift + AV
 Disc Layer	 Shift + Format
 Picture Adjust	 Shift + 3D

