 







 
 
 

 
 



 


 










Original		Rechange		Original		Rechange	
	Power		Power		CH/Page Down		Ch -
	Sleep		Sleep		Vol+		Vol +
	CBL/SAT		1		Vol-		Vol -
	DVD		2		Mute		Mute
	Blu-ray		3		Info		Info
	Game		4		Option		Options
	AUX		5		Back		Back
	Media Player		6		Setup		Menu
	Phono		7		Up		Up
	TV Audio		8		Down		Down
	Tuner		9		Right		Right
	USB		Guide		Left		Left
	Bluetooth		0		Enter		Ok
	Internet Radio		Pre Ch		I<</Tune-		I<<
	Eco		Media		Play		Play
	Eco		3D		Pause		Pause
	CH/Page Up		Ch +		>>I/Tune+		>>I



 


	Original	Rechange
1	Quick Select 1	D. Menu
2	Quick Select 2	Text
3	Quick Select 3	Eject
4	Quick Select 4	AV
MOVIE	Green/Movie	Green
MUSIC	Red/Music	Red
GAME	Blue/Game	Blue
PURE	Yellow/Pure	Yellow

	Original	Rechange





Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol +
	Sleep		Sleep		Vol-		Vol -
	CBL/SAT		1		Mute		Mute
	DVD		2		Back		Back
	Blu-ray		3		Up		Up
	Game		4		Down		Down
	AUX		5		Right		Right
	Media Player		6		Left		Left
	Phono		7		Enter		Ok
	TV Audio		8		I<</Tune-		I<<
	Tuner		9		Play		Play
	USB		Guide		Pause		Pause
	Bluetooth		0		>>I/Tune+		>>I
	Internet Radio		Pre Ch		Quick Select 1		D. Menu
	ECO		Media		Quick Select 2		Text
	CH/Page Up		Ch +		Quick Select 3		Eject
	CH/Page Down		Ch -		Quick Select 4		AV

