













 





 










Original		Rechange		Original		Rechange	
	Power		Power		9		9
	Sleep		Sleep / Timer		EPG		Guide / EPG / -/-
	Screen		Picture / Format		0		0
	Presets		Setup / OPT /		Swap		Fav / Marker / PC
	↔		TV/Radio /		Photo/Music/Movi		D.Menu / Top
	FAV		Shift + Fav / Marker / PC		World		Smart / List
	Lang		Audio / Lang I/II		Source		AV / Input / RDS
	Subtitle		Subtitle / EQ		Menu		Menu / Home
	TXT		Text / Goto		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		C		Exit / Cancel / Clear
	6		6		Disp.		Display / Media
	7		7		Search Mode		Shift + Red / Netflix /
	8		8		Return		Back / Return





Original	Recharge	Original	Recharge
 CH+	 CH+ / Page+	 Yellow/Root	 Yellow / YouTube / Repeat
 Info	 Info / Angle	 Blue/Title	 Blue / Prime Video / Random
 Vol+	 Vol+		
 CH-	 CH- / Page-		
 Mute	 Mute / Dimmer		
 Vol-	 Vol-		
 Rec	 Rec / Rec Mode		
 Pause	 Pause / Step / Freeze		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 <<	 << / Tune-		
 Play	 Play / Slow		
 Stop	 Stop / Hold		
 >>	 >> / Tune+		
 Red/↑/Zoom	 Red / Netflix / Search		
 Red/↑/Zoom	 Zoom / Size		
 Green/↓/Repeat	 Green / APP / Repeat		

