



 





Original	Rechange	Original	Rechange
 Power	 Power		
 Open/Close	 Eject / Surround		
 Skip +10 Folder	 0		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 >>	 >> / Preset+		
 <<	 << / Preset-		
 Vol+	 Vol+		
 Vol-	 Vol-		

