 

 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 


 
 

 


 

 
 

 








 
 
 

 
 

 
 




Original	Recharge
 Power	 Power
 Eject/Auto	 Eject
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 SHIFT + -/-- Shift + Guide
 Recall	 FAV PRE-CH Pre Ch
 Vol+	 + VOL Vol +
 Vol-	 - VOL Vol -

Original	Recharge
 Aspect	 Format
 Audio	 Dual
 CH+	 Ch +
 CH-	 Ch -
 Display	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 LCD Menu	 Menu
 DVD Setup/Exit	 Exit
 DVD Setup/Exit	 Options
 Input	 AV
 P.Mode	 SHIFT + PICTURE FORMAT Shift + Format
 S.Mode	 SHIFT + SOUND DUAL Shift + Dual
 Sleep	 Sleep





Original	Recharge
FAV	Shift + Pre Ch
FAV-	Shift + Ch -
FAV+	Shift + Ch +
EPG	Guide
Angle/Text	Text
Zoom/Hold	Shift + Eject
Tv/Radio	TV/R
Goto/Subpage	3D
D.Disp/Reveal	List
Subtitle	Subt
Title/Size	Smart
D.Menu/Index	D. Menu
I>/Media	Media
Play/Pause	Play
<<<	<<<
Play/Pause	Pause
>>>	>>>

Original	Recharge
Rec	Rec
Stop	Stop
I<<<	I<<<
>>>I	>>>I
Red/Prog	Red
Green/Intro	Green
Yellow/Repeat	Yellow
Blue/A-B	Blue

