











 

 












 
















 






 




Original	Rechange
 Power	 Power
 Media	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info	 Info / Angle
 Menu	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Rechange
 Blue	 Blue / Prime Video / Random
 List	 Smart / List
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Subt	 Subtitle / EQ
 Text	 Text / Goto
 Guide	 Guide / EPG / -/-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return





Original	Recharge
 Exit	 Exit / Cancel / Clear
 Prev	 I<< / Preset-
 Next	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 RW	 << / Tune-
 Rec	 Rec / Rec Mode
 FW	 >> / Tune+
 Prog	 TV/Radio /

Original	Recharge

