





 





 
 
 
 
 

 



 
 




Original	Recharge
 Power	 Power
 (*)	 Subt
 [=]	 Text
 O	 TV/R
 [+]/♦	 Info
 ?	 Options
 I-II/[≡i]	 Dual
 16:9/+	 Format
 (<>)/X	 Exit
 Inst	 Smart
 Input	 AV
 P<P	 Pre Ch
 P+▲	 Ch +
 ▼P-	 Ch -
 P+▲	 Up
 ▼P-	 Down
 V+▶	 Right

Original	Recharge
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Red/Picture	 Red
 Green/Audio	 Green
 Yellow/Timer	 Yellow
 Blue/Headphon	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original	Rechange	Original	Rechange
 0	 0		
 PP	 Back		
 Mute	 Mute		

