










 
 

 

 

 
 
 



 



 
 


 
 



 




 
 


 




 




 
















	Original	Rechange		Original	Rechange
	 Power	 Power		 8	 8
	 Mute	 MUTE		 9	 9
	 Audio	 Audio		 0	 0
	 N/P	 V-FOR		 10+	 -/-- / EPG
	 Subtitle	 Subt.		 Setup	 VOD
	 Zoom	 WIDE		 Down	 DOWN
	 Angle	 BACK		 Up	 UP
	 Program	 OPT+		 Right	 RIGHT
	 Display	 INFO		 Left	 LEFT
	 Step	 SRC		 Enter	 OK
	 1	 1		 Repeat	 TEXT
	 2	 2		 AB	 TV/R
	 3	 3		 Menu	 MENU
	 4	 4		 PBC	 P/C / FAV
	 5	 5		 Stop	 Stop
	 6	 6		 >>	 Fast Forward
	 7	 7		 <<	 Rewind





	Original	Recharge	Original	Recharge
	<<			First
	>>			Last
	Play			Play
	Pause			Pause

