

 



 

 

 

 

 
 
 


 


 






 




	Original	Recharge
	Power	 Power
	Eject	 Eject
	Tv/VCR	 TV/R
	AV	 AV
	CM Skip	 Smart
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	ez Power Off	 Media
	ez Repeat	 Text

	Original	Recharge
	<<	 <<
	Play	 Play
	>>	 >>
	Pause/Still	 Pause
	Stop	 Stop
	LP	 Format
	i	 Info
	OK/CLK/CNT	 Ok
	Rec/OTR	 Rec
	Clear	 Exit
	Up	 Up
	Down	 Down
	Right	 Right
	Left	 Left
	C.Lock	 Blue

