












 

















| Original | Recharge | Original | Recharge |
|------------|---|----------|----------|
| On/Off |  Power | | |
| Mute |  Mute / Dimmer | | |
| Menu Up |  Up | | |
| Menu Left |  Left | | |
| Menu Right |  Right | | |
| Menu Down |  Down | | |
| Volume+ |  Vol+ | | |
| Chan.Up |  CH+ / Page+ | | |
| Volume- |  Vol- | | |
| Chan.Down |  CH- / Page- | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |



| Original | Recharge | Original | Recharge |
|-----------------|---|--------------|---|
| Power ON/Off |  Power | Tape 1 Rew |  I<< / Preset- |
| Mute |  Mute / Dimmer | Tape 1 Play |  OK |
| Tape 1 Stop |  Stop / Hold | Tape 1 F.FWD |  >>I / Preset+ |
| Tape 2 Pre./eq |  D.Menu / Top | | |
| Input/Source |  AV / Input / RDS | | |
| CD/Theater |  Menu / Home | | |
| CD Play |  Play / Slow | | |
| CD F.FWD |  >> / Tune+ | | |
| CD Pause |  Pause / Step / Freeze | | |
| CD Rewind |  << / Tune- | | |
| Funct./Direct |  Exit / Cancel / Clear | | |
| Volume+ |  Vol+ | | |
| Next/Prog+ |  CH+ / Page+ | | |
| Volume- |  Vol- | | |
| Tape 1 Hall/Ats |  Display / Media | | |
| Prev./Prog- |  CH- / Page- | | |
| Program |  TV/Radio / | | |

Program

