



 




 








 

 



 



 

 













 















 

 









Original		Rechange		Original		Rechange	
	Power		Power		6		6
	Aspect		Picture / Format		List		Smart / List
	V-Format		Shift + Picture / Format		7		7
	Mute		Mute / Dimmer		8		8
	Fav		Fav / Marker / PC		9		9
	Subtitle		Subtitle / EQ		0		0
	Info		Info / Angle		Menu		Menu / Home
	TTX		Text / Goto		Up		Up
	Epg		Guide / EPG / -/--		Exit		Exit / Cancel / Clear
	Tv/Radio		TV/Radio /		Left		Left
	Audio		Audio / Lang I/II		Ok		OK
	1		1		Right		Right
	2		2		Vol+		Vol+
	3		3		Down		Down
	Recall		Back / Return		Ch+		CH+ / Page+
	4		4		Vol-		Vol-
	5		5		Ch-		CH- / Page-



