



Original	Recharge
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
AV	AV / Input / RDS
? / Audio	Audio / Lang I/II
PIP / Repeat	Fav / Marker / PC
PIP / Repeat	Shift + Green / APP /
[ <> ] / [ ... ]	Shift + Picture / Format
[ <> ] / [ ... ]	Subtitle / EQ

Original	Recharge
Mute / [Q]	Mute / Dimmer
i	Info / Angle
Z / Back	Back / Return
CH+	CH+ / Page+
Up	Up
Vol-	Vol-
Left	Left
OK	OK
Right	Right
Vol+	Vol+
Down	Down
CH-	CH- / Page-
TXT/Menu	Menu / Home
TXT/Menu	Text / Goto
TV-G/Top Menu	D.Menu / Top
TV-G/Top Menu	Guide / EPG / -/-
Red / Eye	Red / Netflix / Search





 

 
 

 





























 

 









 

 













 

	Original	Recharge		Original	Recharge
	Rec	Rec / Rec Mode			
	Green / Timer	Sleep / Timer			
	Play	Play / Slow			
	Green / Timer	Green / APP / Repeat			
	Yellow	Yellow / YouTube / Repeat			
	Pause	Pause / Step / Freeze			
	Blue / Audio	Shift + Audio / Lang I/II			
	Stop	Stop / Hold			
	Blue / Audio	Blue / Prime Video / Random			
	Scan	Smart / List			
	I<	I<< / Preset-			
	PAT	Eject / Surround			
	>I	>>I / Preset+			
	S	Sound / Title			
	<<	<<< / Tune-			
	P	Picture / Format			
	>>	>>> / Tune+			












Original	Recharge
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV / Input / RDS
 i	 Info / Angle
 z	 Exit / Cancel / Clear
 Up	 Up
 CH+	 CH+ / Page+
 Left	 Left

Original	Recharge
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Top Menu	 D.Menu / Top
 Red	 Red / Netflix / Search
 Rec	 Rec / Rec Mode
 Green	 Green / APP / Repeat
 Play	 Play / Slow
 Yellow	 Yellow / YouTube / Repeat
 Pause	 Pause / Step / Freeze
 Blue	 Blue / Prime Video / Random
 Stop	 Stop / Hold
 I<	 I<< / Preset-





Original	Recharge	Original	Recharge
 >I	 >>I / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		

