 

 



 



 

 

 

 



 

 

 

 

 



 



 

 

 







 



 
 
 

 



 











Original	Recharge	Original	Recharge
 Power	 Power	 3D	 Shift + 3
 1	 1	 ?	 Display / Media
 2	 2	 @	 Info / Angle
 3	 3	 Menu	 Menu / Home
 4	 4	 Up	 Up
 5	 5	 ←	 Back / Return
 6	 6	 ←	 Left
 7	 7	 OK	 OK
 8	 8	 →	 Right
 9	 9	 Tools	 Setup / OPT /
 FAV	 Fav / Marker / PC	 ↓	 Down
 0	 0	 Guide	 Guide / EPG / -/--
 TXT	 Text / Goto	 Vol+	 Vol+
 Red	 Red / Netflix / Search	 Source	 AV / Input / RDS
 Green	 Green / APP / Repeat	 P+	 CH+ / Page+
 Yellow	 Yellow / YouTube / Repeat	 Vol-	 Vol-
 Blue	 Blue / Prime Video / Random	 Mute	 Mute / Dimmer



