
 



 


 


 






 

 



 


 




 

 





 







	Original	Recharge		Original	Recharge
	Power		Power		TXT
	1		1		Text
	2		2		Guide
	3		3		Up
	4		4		Down
	5		5		Right
	6		6		Left
	7		7		Ok
	8		8		Ch +
	9		9		Ch -
	0		0		Vol +
	PIP/Audio		3D		Vol -
	[<>]		Format		Red
	?		Smart		Green
	Mute		Mute		Yellow
	Z/Disc Menu		Menu		Blue
	i/OSD		Info		Play
					Pause






 
 


 

 

 
 







 



 

 
 



 










	Original	Recharge	Original	Recharge
	Stop			
	<<			
	>>			
	I<			
	>I			



 





 



Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PIP/Audio	 3D
 [<>]	 PICTURE FORMAT
 ?	 HOME SMART
 i/OSD	 DISPLAY INFO
 TXT	 REPEAT TEXT
 TV-G	 -/-- GUIDE

Original	Rechange
 Z/Disc Menu	 TOP MENU MENU
 P+ Up	 Up
 P- Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 P+ Ch +	 + CH
 P- Ch -	 - CH
 Vol+	 + VOL
 Vol-	 - VOL
 Red/Image/I>	 A Red
 Green/Timer	 B Green
 Yellow/@	 C Yellow
 Blue/Sound	 D Blue
 Play	 PLAY MODE
 Pause	 Pause
 Stop	 Stop





 
 




 




 




 



 


 



 

 

 







 

 


 




	Original	Rechange	Original	Rechange
	<<			<<
	>>			>>
	>			>>
	<			<<

 

 











Original		Recharge		Original		Recharge	
	Power		Power		Z/Disc Menu		Menu
	1		1		TV-G		Guide
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		Left		Left
	6		6		OK		Ok
	7		7		P+		Ch +
	8		8		P-		Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	PIP/Audio		3D		Red/Image/I>		Red
	[<>]		Format		Green/Timer		Green
	?		Smart		Yellow/@		Yellow
	Mute		Mute		Blue/Sound		Blue
	i/OSD		Info		Play		Play
	TXT		Text		Pause		Pause





 

 

















 




 



 





	Original	Rechange	Original	Rechange
	Stop			
	<<			
	>>			
	<			
	>			





Original	Rechange	Original	Rechange
 Power	 Power	 Z/Disc Menu	 Menu
 1	 1	 P+	 Ch +
 2	 2	 P-	 Ch -
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 Red/Image/I>	 Red
 PIP/Audio	 3D	 Green/Timer	 Green
 [<>]	 Format	 Yellow/@	 Yellow
 ?	 Smart	 Blue/Sound	 Blue
 i/OSD	 Info	 Play	 Play
 TXT	 Text	 Pause	 Pause
 TV-G	 Guide	 Stop	 Stop





	Original	Rechange	Original	Rechange
	<<			<<
	>>			>>
	I<			I<<
	>I			>>I

