




 



 




 


 



 



 

 

 



 



 



 











 









 








Original		Recharge		Original		Recharge	
	Power		Power		Menu		Menu
	1		1		Exit		Exit
	2		2		Back		Back
	3		3		Tools		Options
	4		4		Guide		Guide
	5		5		CEC		Smart
	6		6		?		List
	7		7		OK		Ok
	8		8		Up		Up
	9		9		Down		Down
	0		0		Left		Left
	FAV		Pre Ch		Right		Right
	TXT		Text		Vol+		Vol +
	Red		Red		Vol-		Vol -
	Green		Green		Source		AV
	Yellow		Yellow		Mute		Mute
	Blue		Blue		P+		Ch +





Original		Rechange		Original		Rechange	
	P-		Ch -				
	Rec		Rec				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	<<		<<				
	>>		>>				
	[...]		Subt				
	[<>]		Format				
	Q		Info				
	Tv/Radio		TV/R				
	My Media		Media				
	I<		I<<				
	>I		>>I				

