
























Original	Recharge	Original	Recharge
 Power	 Power	 10+/Tun+	 Up
 Sleep	 Sleep / Timer	 10+/Tun+	 Shift + >> /
 Open/Close	 Eject / Surround	 Stop	 Stop / Hold
 Intro	 Smart / List	 Fold-	 CH- / Page-
 Source	 AV / Input / RDS	 Fold+	 CH+ / Page+
 Info	 Info / Angle	 Prog/Memory	 TV/Radio /
 Rep	 Menu / Home	 Vol-	 Vol-
 Rep	 Green / APP / Repeat	 Vol+	 Vol+
 EQ	 Subtitle / EQ	 Clock	 Shift + Sleep / Timer
 I<<	 I<< / Preset-	 Mute/Alarm	 Mute / Dimmer
 <<	 << / Tune-		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 >>	 >> / Preset+		
 10-/Tun-	 Down		
 10-/Tun-	 Shift + << / Tune-		

Tune-

Original	Recharge
 10+/Tun+	 Up
 10+/Tun+	 Shift + >> /
 Stop	 Stop / Hold
 Fold-	 CH- / Page-
 Fold+	 CH+ / Page+
 Prog/Memory	 TV/Radio /
 Vol-	 Vol-
 Vol+	 Vol+
 Clock	 Shift + Sleep / Timer
 Mute/Alarm	 Mute / Dimmer

