

















Original	Recharge
 Power	 Power
 Sleep	 Sleep / Timer
 Open/Close	 Eject / Surround
 Intro	 Smart / List
 Source	 AV / Input / RDS
 Info	 Info / Angle
 I<<	 I<< / Preset-
 Menu / Rep	 Menu / Home
 Menu / Rep	 Green / APP / Repeat
 EQ	 Subtitle / EQ
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 >>	 >>  / Preset+
 10-/Tun-	 Down
 10-/Tun-	 Shift + << / Tune-

Tune-

Original	Recharge
 10+/Tun+	 Up
 10+/Tun+	 Shift + >> /
 Stop / Auto	 Stop / Hold
 Stop / Auto	 OK
 Fold-	 CH- / Page-
 Fold+	 CH+ / Page+
 Prog/Memory	 TV/Radio /
 Vol-	 Vol-
 Vol+	 Vol+
 Clock	 Shift + Sleep / Timer
 Mute/Alarm	 Mute / Dimmer

