



Original		Rechange		Original		Rechange	
	I<<		I<< / Preset-		8		8
	>>I		>>I / Preset+		9		9
	Power		Power		Sleep		Sleep / Timer
	Stop		Stop / Hold		0		0
	Pause		Pause / Step / Freeze		+10		Guide / EPG / -/-
	Rec		Rec / Rec Mode		DSC		Smart / List
	<>		Play / Slow		Display		Display / Media
	Mute		Mute / Dimmer		Open/Close		Eject / Surround
	Volume-		Vol-		CD		Shift + 3
	Volume+		Vol+		Tape		Shift + 5
	1		1		Tuner		Shift + 6
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				

