







 





























 

































 

 
 






Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol+
	Mute		Mute / Dimmer		Peri		Smart / List
	Colour-		<< / Tune-		P+		CH+ / Page+
	Colour+		>> / Tune+		Vol-		Vol-
	Brightness/DX-		I<< / Preset-		P-		CH- / Page-
	Brightness/DX+		>>I / Preset+		1		1
	Blue/Audio		Audio / Lang I/II		2		2
	Red/Picture		Picture / Format		3		3
	Green/Timer		Sleep / Timer		4		4
	TXT		Text / Goto		5		5
	0/AV		AV / Input / RDS		6		6
	Up		Up		7		7
	i		Info / Angle		8		8
	Left		Left		9		9
	OK		OK		0/AV		0
	Right		Right		Red/Picture		Red / Netflix / Search
	Down		Down		Green/Timer		Green / APP / Repeat


















 
 








 









 















Original	Rechange	Original	Rechange
 Power	 Power	 Vol-	 Vol-
 Mute	 Mute / Dimmer	 P-	 CH- / Page-
 Brightness/DX-	 I<< / Preset-	 1	 1
 Brightness/DX+	 >>I / Preset+	 2	 2
 Blue/Audio	 Audio / Lang I/II	 3	 3
 Red/Picture	 Picture / Format	 4	 4
 Green/Timer	 Sleep / Timer	 5	 5
 TXT	 Text / Goto	 6	 6
 Up	 Up	 7	 7
 i	 Info / Angle	 8	 8
 Left	 Left	 9	 9
 OK	 OK	 0/AV	 0
 Right	 Right	 Red/Picture	 Red / Netflix / Search
 Down	 Down	 Green/Timer	 Green / APP / Repeat
 Vol+	 Vol+	 Yellow/Format	 Yellow / YouTube / Repeat
 Peri	 Smart / List	 Blue/Audio	 Blue / Prime Video / Random
 P+	 CH+ / Page+	 Yellow/Format	 Shift + Picture / Format












Original		Rechange		Original		Rechange	
	Power		Power		OK		OK
	1		1		Down		Down
	2		2		P-		CH- / Page-
	3		3		i		Info / Angle
	4		4		TXT		Text / Goto
	5		5		A/B		Yellow / YouTube / Repeat
	6		6		Red/Picture		Red / Netflix / Search
	7		7		Red/Picture		Picture / Format
	8		8		Green/Timer		Green / APP / Repeat
	9		9		Green/Timer		Sleep / Timer
	0/AV		0		Blue/Audio		Blue / Prime Video / Random
	Up		Up		Blue/Audio		Audio / Lang I/II
	P+		CH+ / Page+		Brightness/DX-		I<< / Preset-
	Right		Right		Brightness/DX+		>>I / Preset+
	Vol+		Vol+		Mute		Mute / Dimmer
	Left		Left				
	Vol-		Vol-				





Original	Recharge	Original	Recharge
 Power	 Power		
 P+	 CH+ / Page+		
 Play	 Play / Slow		
 Stop	 Stop / Hold		
 P-	 CH- / Page-		
 Rec	 Rec / Rec Mode		
 TXT / Exit	 Text / Goto		
 TXT / Exit	 Exit / Cancel / Clear		
 A/B	 Yellow / YouTube / Repeat		
 Pause	 Pause / Step / Freeze		
 <<	 << / Tune-		
 >>	 >> / Tune+		

