



| Original | Recharge |
|--------------|-----------------------|
| Power | Power |
| Open / Close | Eject / Surround |
| Mode | Setup / OPT / |
| Menu | Menu / Home |
| Bluetooth | Shift + 9 |
| Dimmer | Shift + Mute / Dimmer |
| Clock | Shift + Sleep / Timer |
| Alarm | Smart / List |
| Sleep | Sleep / Timer |
| Snooze | Display / Media |
| Info | Info / Angle |
| Intro | Text / Goto |
| Folder Down | CH- / Page- |
| Folder Up | CH+ / Page+ |
| Stop | Stop / Hold |
| Play / Pause | Play / Slow |
| << | << / Tune- |

| Original | Recharge |
|----------|-----------------------------|
| >> | >> / Tune+ |
| Random | Blue / Prime Video / Random |
| Up | Up |
| Repeat | Green / APP / Repeat |
| Left | Left |
| OK | OK |
| Right | Right |
| A-B | Yellow / YouTube / Repeat |
| Down | Down |
| Mute | Mute / Dimmer |
| POP | Shift + 1 |
| Vol+ | Vol+ |
| Classic | Shift + 3 |
| Rock | Shift + 2 |
| Vol- | Vol- |
| Flat | Shift + 4 |
| 1 | 1 |



