


 



 

 


 
 
 


 
 
 







 
 


 







Original	Recharge
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 Mode	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 +  Shift + Guide
 Back	 Back
 Nicam/A2	 Dual

Original	Recharge
 TXT/MIX	 Text
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Rec	 Rec
 >>/Index	 >>
 <</Hold	 <<
 I<<	 I<<
 >>I	 >>I
 Cancel	 Exit
 Menu	 Menu
 DTV/Radio	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right









 













 
 
Original	Rechange	Original	Rechange
	Left		FAV-
	Enter		Shift + Ch -
	CH+		
	CH-		
	FAV		
	EPG		
	Info		
	List		
	Red		
	Green		
	Yellow		
	Blue		
	Size		
	Reveal		
	Subtitle		
	Subpage		
	FAV+		Shift + Ch +
	Left		
	Ok		
	Ch +		
	Ch -		
	Pre Ch		
	Guide		
	Info		
	List		
	Red		
	Green		
	Yellow		
	Blue		
	Format		
	3D		
	Subt		
	AV		





 




 



 



Original	Recharge	Original	Recharge
Power		Power	Power
Mute		Mute	Mute
[ I ]/Menu		Menu	Menu
Exit		Exit	Exit
Source		AV	AV
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
Subtitle		Subt	Subt
Text		Text	Text

Original	Recharge	Original	Recharge
Vol+		Vol +	Vol +
Vol-		Vol -	Vol -
CH+		Ch +	Ch +
CH-		Ch -	Ch -
Up		Up	Up
Down		Down	Down
Right		Right	Right
Left		Left	Left
OK		Ok	Ok
Recall		Back	Back
Info		Info	Info
EPG		Guide	Guide
Freeze		Options	Options
Red		Red	Red
Green		Green	Green
Yellow		Yellow	Yellow
Blue		Blue	Blue





Original	Recharge	Original	Recharge
Audio	 Dual		
I<</[≡+]	 I<<		
>>I/[≡..]	 >>I		
[≡i]	 Smart		
Play	 Play		
Pause	 Pause		
Stop	 Stop		
REP/Rec	 Rec		
<</[≡o]	 <<		
>>/[≡?]	 >>		
FAV	 Pre Ch		

