





 

 


 
 
 

 

 

 





 












Original	Rechange
 Power	 Power
 Mute	 Mute
 Source	 AV
 PMode	 Format
 SMode	 Shift + Dual
 I/II	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 -/--	 Shift + Guide
 TV Menu	 Menu
 DVB Menu	 D. Menu
 D.Exit	 Exit
 QV	 Pre Ch
 Call	 Back
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 V-	 Vol -
 V+	 Vol +
 P-	 Ch -
 P+	 Ch +
 Red	 Red
 Green	 Green





Original	Rechange
Yellow	Yellow
Blue	Blue
Subtitle	Subt
Size	3D
Hold	Stop
Reveal	Smart
TV / Text	Text
Index	Shift + Info
Cancel	Shift + Back
Mix	Shift + Text
Subpage	Shift + Subt
FAV	Shift + Pre Ch
Info	Info
Language	Options
TV / Radio	TV/R
EPG	Guide

Original	Rechange

