



Original	Rechange
System Off	Power
TV	Shift + 1
Disc	Shift + 2
Radio	Shift + 3
AUX	Shift + 4
Video	Shift + 5
D-IN	Shift + 6
USB1	Shift + 7
USB 2	Shift + 8
PC	Shift + 9
Presets + / Pic +	Ch +
Presets - / Pic -	Ch -
Info	Info
Mute	Mute
Subtitle	Subt
Audio	Dual
Volume +	Vol +

Original	Rechange
Volume -	Vol -
Set-Up Menu	Menu
Disc Menu / Teletext	D. Menu
Disc Menu / Teletext	Text
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Status / Mix	Smart
OSD	Media
Red / Playlist	Red
Green / Random	Green
Yellow / Repeat	Yellow
Blue / Angle	Blue
Yellow / Repeat	Shift + Text
Red / Playlist	List





Original		Rechange		Original		Rechange	
	1		1		<< Search/Slow		<<
	2		2		>> Search/Slow		>>
	3		3		Play		Play
	4		4		Title	+	Shift + Info
	5		5		Stop		Stop
	6		6		Pause / Freeze		Pause
	7		7				
	8		8				
	9		9				
	0		0				
	Clear		Exit				
	Zoom	+	Shift + Eject				
	A-B	+	Shift + Play				
	Screen Format		Format				
	Open		Eject				
	I<< Previous/Step		I<<				
	>>I Next/Step		>>I				

