



Original	Recharge
On	Power
Off	Shift + Power
Mute	Mute / Dimmer
AVR	Fav / Marker / PC
DVD	Shift + 2
CD	Shift + 3
Tape	Shift + 5
VID1/VCR	Guide / EPG / -/--
VID2/TV	Shift + 1
VID3/CBL/SAT	Shift + 0
VID4	Shift + Guide / EPG / -/--
AM/FM	Shift + 6
6/8 CH	Picture / Format
Sleep	Sleep / Timer
Test	Text / Goto
Vol+	Vol+
Surr.	Eject / Surround

Original	Recharge
Night	Info / Angle
M-Room	Zoom / Size
Vol-	Vol-
CH./[≡?]	Yellow / YouTube / Repeat
Up	Up
SPKR/Menu	Menu / Home
Left	Left
Set	D.Menu / Top
Right	Right
Digital/[≡X]	Red / Netflix / Search
Down	Down
Delay/Normal	Setup / OPT /
1	1
2	2
3	3
4	4
5	5





Original	Recharge
6	6
7	7
8	8
Tun-M/[≡+]	Green / APP / Repeat
9	9
0	0
Mem/[≡◆]	Rec / Rec Mode
Tuning ▲	>> / Tune+
Direct	TV/Radio /
Clear	Exit / Cancel / Clear
Preset ▲	>>I / Preset+
Tuning ▼	<< / Tune-
OSD	Display / Media
RDS	AV / Input / RDS
Preset ▼	I<< / Preset-
Dolby	Sound / Title
DTS Surr.	Smart / List

Original	Recharge
DTS Neo 6	Subtitle / EQ
Logic 7	Blue / Prime Video / Random
Stereo	Audio / Lang I/II
I<</Skip Down	Shift + I<< / Preset-
Skip Up/>>I	Shift + >>I / Preset+
<< DVD	Shift + << /
Play DVD	Play / Slow
>> DVD	Shift + >> /
Stop DVD	Stop / Hold
Pause DVD	Pause / Step / Freeze





Original		Recharge		Original		Recharge	
	Power On		Power		3		3
	Power Off		Shift + Power		4		4
	Vol+		Vol+		5		5
	Night		Info / Angle		6		6
	M-Room		Zoom / Size		7		7
	Vol-		Vol-		8		8
	CH./[≡?]		Yellow / YouTube / Repeat		Tun-M/[≡+]		Green / APP / Repeat
	Up		Up		9		9
	SPKR/Menu		Menu / Home		0		0
	Left		Left		Mem/[≡◇]		Rec / Rec Mode
	Set		D.Menu / Top		Direct		TV/Radio /
	Right		Right		Clear		Exit / Cancel / Clear
	Digital/[≡X]		Red / Netflix / Search		Preset ▲		Shift + >>I / Preset+
	Down		Down		RDS/D.Skip		AV / Input / RDS
	Delay/Normal		Setup / OPT /		Preset ▼		Shift + I<< / Preset-
	1		1		I<<		I<< / Preset-
	2		2		>>I		>>I / Preset+





Original	Recharge	Original	Recharge
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze





Original	Recharge
 Power On	 Power
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Mem/[≡ ♦]	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Direct	 TV/Radio /
 Delay/Normal	 Setup / OPT /
 RDS/D.Skip	 AV / Input / RDS
 SPKR/Menu	 Menu / Home
 Power (On/Off)	 OK
 Clear VCR	 Exit / Cancel / Clear
 Vol+ VCR	 Vol+
 PR+ VCR	 CH+ / Page+

Original	Recharge
 Vol- VCR	 Vol-
 PR- VCR	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tun-M/[≡ +]	 Green / APP / Repeat
 Preset ▲/Blue	 Blue / Prime Video / Random
 Power Off	 Shift + Power
 Play VCR	 Shift + Play /
 Stop VCR	 Shift + Stop /

Hold















Original	Recharge
Rec VCR	Shift + Rec / Rec Mode
<< VCR	Shift + << /
>> VCR	Shift + >> /
1 VCR	Shift + 1
2 VCR	Shift + 2
3 VCR	Shift + 3
4 VCR	Shift + 4
5 VCR	Shift + 5
6 VCR	Shift + 6
7 VCR	Shift + 7
8 VCR	Shift + 8
9 VCR	Shift + 9
0 VCR	Shift + 0

Original	Recharge





Original	Rechange
	 Play / Slow
	 >> / Tune+
	 << / Tune-
	 Stop / Hold
	 Rec / Rec Mode

Original	Rechange

