

 

 
 
 
 



 




 
 
 

 
 
 


 
 
 

 










 

 

 
 
 
 
 

 

 
 

 
 

 
 
 
 
 







 
 
 




Original	Rechange
 Power	 Power
 Input	 AV
 Home	 Shift + Smart
 YouTube	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Pre Ch
 Mute	 Mute
 Info	 Info

Original	Rechange
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Q.View	 Options
 Guide	 Guide
 Menu	 Menu
 Return	 Back
 Exit	 Exit
 3D	 3D
 CH.List	 List
 MTS/SAP	 Dual
 CC	 Subt
 Q.Menu	 D. Menu
 OK	 Ok
 Up	 Up
 Down	 Down





Original	Rechange	Original	Rechange
 Right	 Right		
 Left	 Left		
 Sleep	 Sleep		
 S.Mode	 Shift + Dual		
 USB	 Media		
 P.Mode	 Shift + Format		
 H.Lock	 Shift + Stop		
 P.Size	 Format		
 Red	 Red		
 Play	 Play		
 Pause	 Pause		
 Green	 Green		
 <<	 <<		
 Yellow	 Yellow		
 >>	 >>		
 Blue	 Blue		
 Stop	 Stop		

